




Caberfix X-treme

Caberfix X-treme all-weather tape is the ultimate all-weather tape for guaranteed watertight joint sealing of the Caberdek flooring system in adverse weather. X-treme tape is so strong that it needs a special liner paper, please see below instructions for use.


Step 1. Ensure clean application surface

Ensure the surface of the joint is free from dust, dirt and debris. Wipe or sweep excess water away from joint to be sealed. Peel back short section of liner paper and stick the X-treme tape so it is positioned centrally on joint.

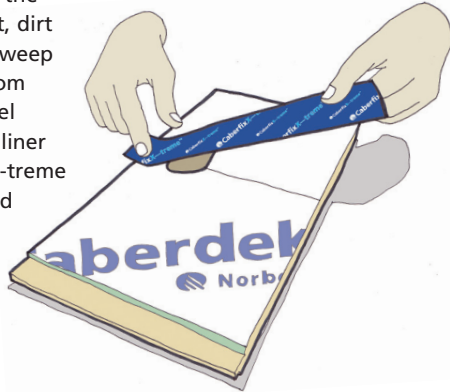


Step 2. Cut to appropriate length

Unwind appropriate length of X-treme tape from the roll and cut, or tear, to length. Wearing appropriate PPE, use a knife or scissors to give a clean cut.

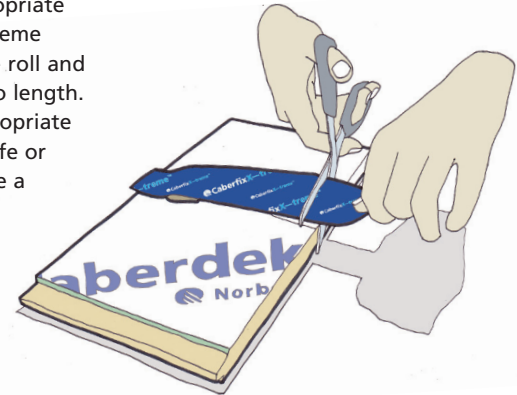


Step 3. Remove liner paper

Remove the liner paper and press X-treme tape into position along the desired length.

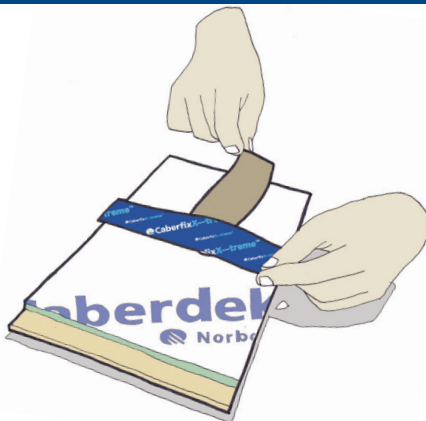


Step 4. Apply pressure for firm bond

The X-treme tape should now be pressed firmly to create a strong bond between the adhesive tape and the Caberdek protective film. A small hand roller can be used to apply pressure and remove trapped air bubbles.

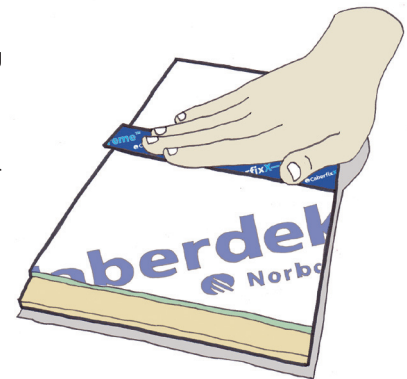

Step 5. Remove Caberdek film

Once the building is weather tight and all construction and decoration work is complete, the Caberdek film can be removed by pulling slowly but firmly from the short end.

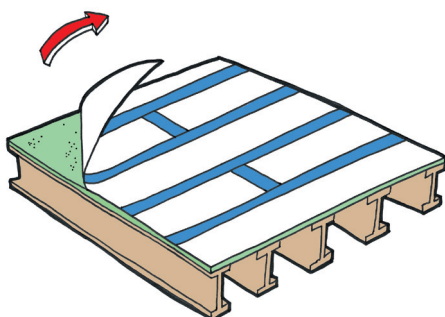

Additional Advice

- X-treme tape should also be applied to all perimeter edges and stairway openings, with a 25mm overlap on top of the Caberdek Protective film.
- We recommend that Caberfix X-treme tape is used to repair any areas of Caberdek protective film that become damaged during the construction process.